



iCentral System One Music/Video/Intercom system.

## M200/M250 User Manual

### Products covered



System One  
M200 Compact Master  
M250 Master



System One  
D200 Door Stations  
Video & Non-Video



System One  
Alloy Video Door  
Station



System One  
R200 Room Stations



System One  
K200 Desktop Stations

# *iCentral*<sup>TM</sup>

## Intelligent Central Systems

web: [www.icentralsystems.com.au](http://www.icentralsystems.com.au)  
email: [sales@icentralsystems.com.au](mailto:sales@icentralsystems.com.au)

Sales, Service, Spares consumer enquiries ☎ 1300 050 333



iCENTRAL TRADE & DEALER ENQUIRIES

### HEAD OFFICE

Ness Corporation Pty Ltd  
ABN 28 069 984 372  
Ph +61 2 8825 9222 Fax +61 2 9674 2520  
[ness@ness.com.au](mailto:ness@ness.com.au)

[www.ness.com.au](http://www.ness.com.au)

System One User manual rev 4.3  
Document part number: 890-425

Covering the products:

100-932 M250 Master White  
100-933 M250 Master Ivory  
106-900 M250 Master with DAB+ White  
106-901 M250 Master with DAB+ Ivory  
100-946 M200 Compact Master Station White  
106-947 M200 Compact Master Station Ivory  
106-902 M200 Compact Master Black  
106-903 M200 Compact Master with DAB+ White  
106-904 M200 Compact Master with DAB+ Black  
106-905 M200 Compact Master with DAB+ Ivory



### COPYRIGHT NOTICE

All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Ness.

Ness reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

© 2017 Ness Corporation ABN 28 069 984 372

# CONTENTS

INTRODUCTION .....	4
FEATURES .....	4
SPECIFICATIONS .....	4
KEY FUNCTIONS .....	5-7
INITIAL POWER-UP .....	8
RADIO/CLOCK FUNCTIONS – AM/FM VERSION .....	8
Setting the clock .....	8
Radio operation .....	8
Tuning the radio .....	8
Storing radio presets .....	8
Using the wake-up alarm .....	8
RADIO/CLOCK FUNCTIONS – DAB+/FM VERSION .....	9
Setting the clock .....	9
Radio operation .....	9
Tuning the radio .....	9
Storing radio presets .....	9
Using the wake-up alarm .....	9
Other functions .....	9
BLUETOOTH OPERATION .....	10
INTERCOM OPERATION .....	11
Door/gate station operation .....	11
Lock output .....	11
Paging calls .....	11
Select calls .....	12
Music mode .....	12
Monitor mode .....	12
Privacy mode .....	12
Audio off mode .....	13
Volume adjustment .....	13
Desktop station – audio input .....	13
Auxiliary outputs .....	13
Audio input selector .....	14
Video monitoring at the master .....	14
Video monitoring at additional video displays .....	14
Audio input jack .....	14
Wireless audio input .....	15
HELP MENU .....	15

## INTRODUCTION

The System One™ Home Communication System can be installed using up to 20 stations offering great flexibility and convenience.

This total Home Communications System continues to set the highest standards of quality and performance for which the System One™ name has become well known.

## FEATURES

### SYSTEM FEATURES

- Supports a Master Station and a combination of up to 20 Room stations and Door stations
- Selective room calling to individual stations or groups of stations
- Paging calls to all stations
- Masters available with AM/FM Radio with clock
- Masters available with DAB+ Digital Radio & clock
- Video front door monitoring option
- Master Stations with colour LCD monitor (except 100-928, 106-910)
- Door call
- Hands free reply from all stations
- Privacy (Do Not Disturb) function at each room station
- Child Monitoring function
- Music On/Off function
- Auto or manual call cancel
- Volume control at each station
- Sensitive electret microphone
- Backlit buttons (programmable backlighting disable)
- Microphone active indication
- Privacy indication
- System In Use indication
- Illuminated Door chime press button
- 10 programmable door chimes
- Control of auxiliary devices (M200/M250 master)
- Optional piped music from auxiliary audio sources

### M200/M250 MASTER STATION FEATURES

- Available in White or Ivory
- Models available with AM/FM Radio or DAB+ Digital Radio
- Models available with DAB+ Digital Radio & Bluetooth
- Compatible with all System One door stations and room stations.
- 5.6" TFT LCD display with on screen Graphical User Interface (GUI)
- Fully programmable via GUI
- Compatible with System One D200 video door stations
- 3 video inputs for monitoring door stations, CCTV cameras or TV inputs
- Dual programmable automation outputs at the master
- Auxiliary music input at the master - for iPod, CD, MP3 players
- Video output for an additional video monitor

## SPECIFICATIONS

MASTER STATIONS	
<b>Model Number</b>	M200 - COMPACT M250 - STANDARD
<b>Dimensions</b> (in millimetres)	M200: 231H x 319W x 62D (including 50mm recessed portion) M250: 388H x 322W x 91.5D (including 72.5mm recessed portion)
<b>Radio</b>	AM/FM or DAB+/FM – both options with wake-up alarm and radio station presets
<b>Clock</b>	Illuminated LCD Digital display
<b>Video Monitor</b>	5.6" Colour TFT display

ROOM STATION	
<b>Model Number</b>	R200 (S1-R)
<b>Dimensions</b> (in millimetres)	129H x 265W x 43.5D (surface mount version) 129H x 265W x 50D (recess mount version including 28mm recessed portion)

 
DESKTOP STATION	
<b>Model Number</b>	K200 (S1-DT)
<b>Dimensions</b> (in millimetres)	85H x 180W x 112D


DOOR STATIONS	
<b>Model Number</b>	D200 (S1-FD) - Available as surface or recess mount, with or without camera D220 (Alloy) – Vertical surface mount with camera – optional flush mount plate available
<b>Dimensions</b> (in millimetres)	129H x 265W x 43.5D (D200 surface mount version) 129H x 265W x 50D (D200 recess mount version including 28mm recessed portion) 173H x 98W x 2dD (D220 Alloy)

## **KEY FUNCTIONS**


1. Display for Clock/Radio
2. Volume Buttons
3. Numbered Call Buttons – for calling individual stations
4. Lock Release Button
5. LED Indicators - Intercom Functions
  - GREEN    Talk/Monitor/Privacy
  - RED        Music/In Use/Audio Off
6. Mode Buttons
  - PRIV    Turns Privacy mode on/off
  - MON    Turns Monitor mode on/off
  - MUS    Turns Music mode on/off
7. Intercom Function buttons
  - CLEAR    Cancels intercom calls
  - HOUSE    Press to communicate to all stations. Release to Listen
  - DOOR     Press to communicate to Door station. Release to Listen
  - AUX       Controls auxiliary functions
8. In-built speaker
9. Video Display
10. Camera Lighting
11. Doorbell Button (Illuminated on D200 model)
12. Video Camera
13. Radio/Clock Buttons
14. Audio Input Socket for MP3 Player, PC Audio, etc.
15. Audio Source Selector Switch
16. Right Angle Adaptor for audio input
17. LED Indicators – General Functions
  - TUNER                      Indicates that Tuner is the selected input
  - AUX MUSIC                Indicates that Aux Music is the selected input
  - RADIO FILTER            High cut filter to reduce treble or radio noise
  - GATE STATUS             Indicates automatic gate is open or closed
  - AUX OUTPUT 1            Indicates when Aux Output 1 is active
  - AUX OUTPUT 2            Indicates when Aux Output 2 is active

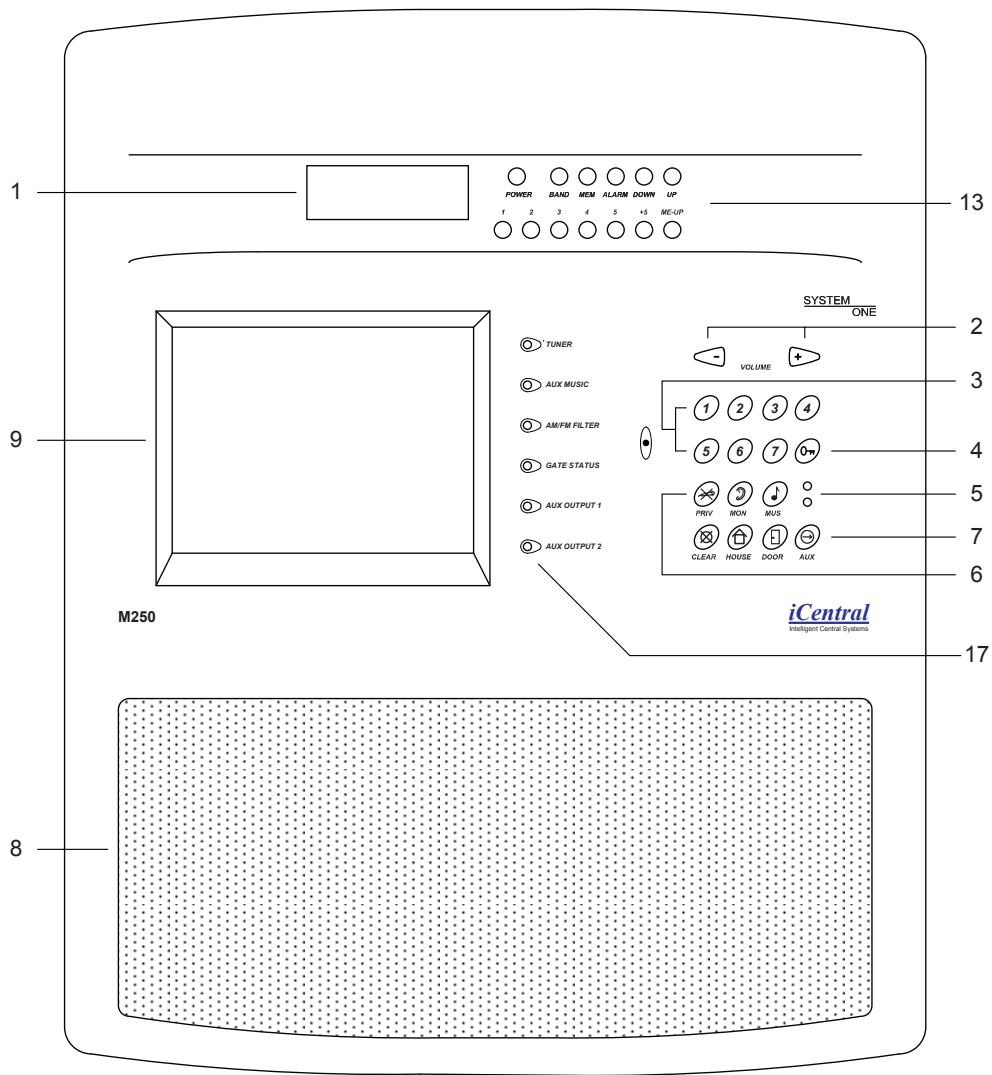


M250 Master Station

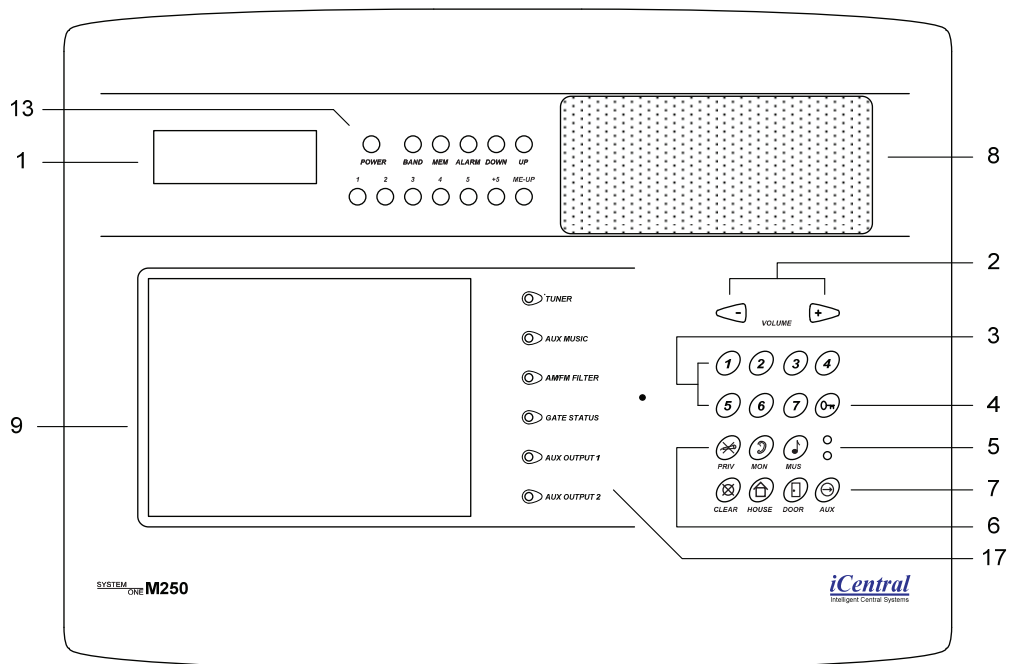 


M200 Master Station

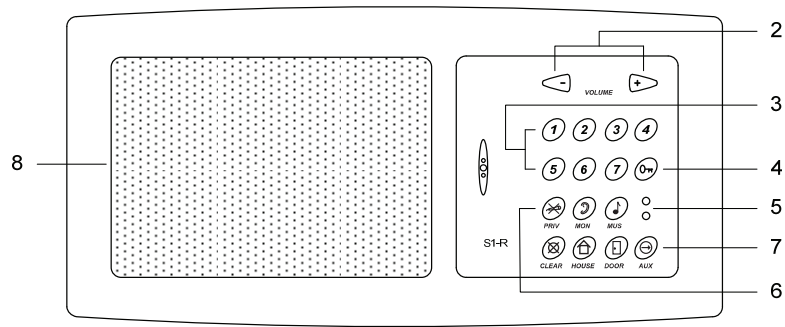 


R200 (S1-R) Room Station

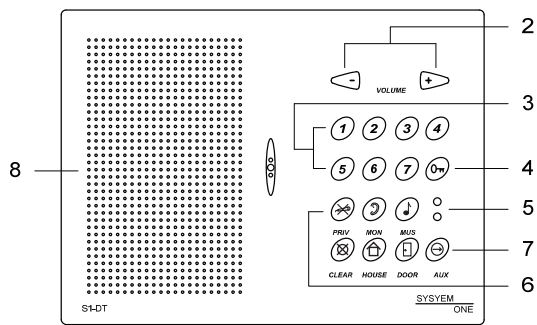 


K200 (S1-DT) Desktop Station

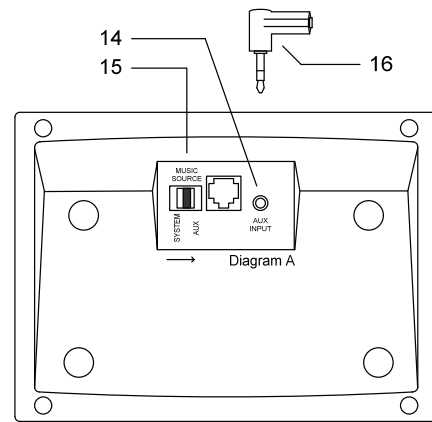 

 Bottom View of K200 (S1-DT) Desktop Station

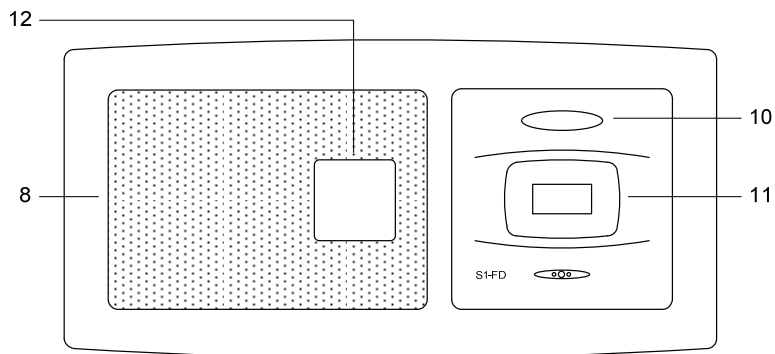

D200 (S1-FD) Door Station

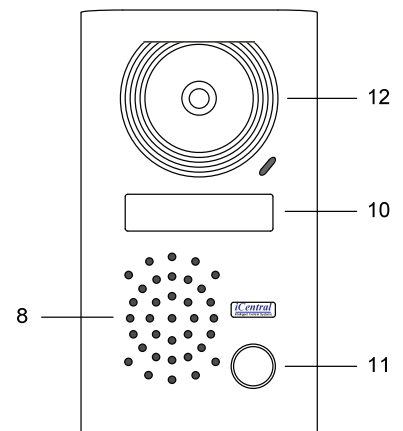 

D220 Alloy Door Station



## INITIAL POWER-UP

On power up the master displays a blue welcome screen showing the applicable software version.

 
- Press the CLEAR button to clear screen the screen.

## RADIO/CLOCK FUNCTIONS – AM/FM VERSION

### SETTING THE CLOCK

- If the radio is on, press the POWER button to turn the radio off. The time will be displayed.
- Press and release the MEM button.
- While the minutes are flashing, press the UP or DOWN buttons to adjust the minutes.
- Press and release the MEM button again.
- While the hours are flashing, press the UP or DOWN buttons to adjust the hours and AM/PM.
- Press and release the MEM button once again.
- Press and release MEM to set the time and exit *Time Set* mode.

*Clock and radio setup applies only to systems fitted with a master station.*

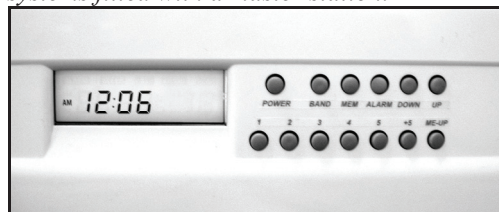

Master Station clock and radio display

### RADIO OPERATION

- Press the POWER button at the master station to turn the radio on or off throughout the system.  
(Time is displayed when radio is turned off)
- Ensure the green TUNER indicator is illuminated at the master station (Press AUX then 3 if it is not)
- Press the MUS button at any station to enable *Music* mode for that station.  
(The red light will be on when *Music* mode is enabled)
- The radio volume can be adjusted individually at each station using the VOLUME buttons.
- Press the MUS button again to exit *Music* mode.

### TUNING THE RADIO

- Press the POWER button at the master station to turn the radio on.
- Press the BAND button to select AM or FM.
- Use the UP and DOWN buttons to select your desired radio station frequency.
- If radio presets have been stored, you can select programmed radio stations by pressing the buttons numbered 1 to 5. (Use the 5+ button followed by buttons 1 to 5 to select preset radio stations 6–10)
- You can use the ME-UP button to sequentially select programmed radio stations 1–10.

### STORING RADIO PRESETS

- Press the POWER button at the master station to turn the radio on.
- Use the UP and DOWN buttons to select the desired frequency.
- Press the MEM button.
- Press the desired preset button (1–5).
- Press the MEM button again to store the station.
- Note: For presets 6 to 10, press the 5+ button followed by one of the buttons 1 to 5.

### USING THE WAKE-UP ALARM

- Turn the radio ON
- Select the desired frequency Band and Station
- Turn the radio off again
- Press and hold the ALARM key until the MINUTES begin to flash
- Use the UP/DOWN keys to adjust the alarm time MINUTES
- Press the ALARM key again – the HOURS will begin to flash
- Use the UP/DOWN keys to adjust the alarm time HOURS
- Press the ALARM key again – ON or OFF will be displayed indicating the status of the alarm function
- Use the UP/DOWN keys to turn the alarm function ON or OFF as required
- Press the ALARM key once again to complete the alarm programming procedure and return to the current time

NOTE: Ensure the radio is turned OFF so the radio can turn ON at the designated time.

If the radio is left ON, the function will operate in reverse and the radio will turn OFF at the designated time.



 
## RADIO/CLOCK FUNCTIONS – DAB+/FM VERSION

### SETTING THE CLOCK

There is no need to set the clock. The first time the power button is pressed, the tuner will automatically scan for available digital radio stations and synchronize the time and date.

The time is normally displayed when the radio is turned off however the time may be viewed while the radio is on by repeatedly pressing the INFO button until the time and date is displayed. If required, there is also a provision for manual adjustment (see below).

*Clock and radio setup applies only to systems fitted with a master station.*

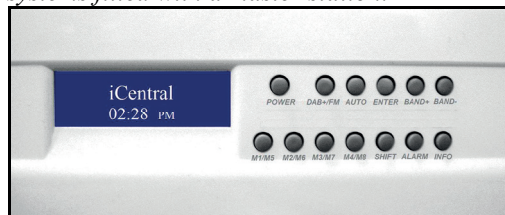

Master Station clock and radio display

### RADIO OPERATION

- Press the POWER button at the master station to turn the radio on or off throughout the system.  
(Time is displayed when radio is turned off)
- Ensure the green TUNER indicator is illuminated at the master station (Press AUX then 3 if it is not)
- Press the MUS button at any station to enable *Music* mode for that station.  
(The red light will be on when *Music* mode is enabled)
- The radio volume can be adjusted individually at each station using the VOLUME buttons.
- Press the MUS button again to exit *Music* mode.

### TUNING THE RADIO

- Press the POWER button at the master station to turn the radio on.
- (The tuner may automatically scan for available DAB radio stations if required by the tuner)
- Press the DAB/FM button to select DAB or FM.
- For DAB stations, use the BAND+ and BAND– buttons to cycle through the available radio stations and press ENTER to select the station you want to listen to.
- For FM stations, use the BAND+ and BAND– buttons to tune the desired radio frequency.
- (Press the BAND+/- buttons repeatedly to single step or press and hold to quickly scan)
- If radio presets have been stored, you can select programmed radio stations by pressing buttons M1 to M4 or press the SHIFT button followed by M5 to M8.

### STORING RADIO PRESETS

- Eight DAB and eight FM radio presets may be stored.
- Press the POWER button at the master station to turn the radio on.
- Tune to the desired radio station as outlined above.
- Press and hold buttons M1 to M4 to store radio presets 1 to 4.
- To store radio presets 5 to 8, press the SHIFT button and then press and hold buttons M5 to M8.

### USING THE WAKE-UP ALARM

- Press the ALARM button and then press the ENTER button to display the status for ALARM1
- Press the BAND+ button to display the status for ALARM2 or press ENTER to change ALARM1 details
- Press Enter to toggle ALARM1 On or Off
- Use the BAND+ button to navigate through the various ALARM options and use the ENTER button to select or confirm (Options include: Time, Days, Alarm Mode, Alarm Station, Alarm Volume, Save Changes)

### USING THE SLEEP FUNCTION

- With the radio turned On, press the ALARM button and then press the BAND+ button to display SLEEP
- Press the ENTER button to select SLEEP TIMER
- Use the BAND+ button to navigate through the six preset sleep timer options
- Press Enter to confirm your selection (zZ Countdown Timer is displayed)
- Radio will turn off when Countdown Timer reaches 0

### OTHER FUNCTIONS

- Pressing the AUTO button with DAB radio selected, forces the tuner to scan for all available DAB stations.
- Pressing the AUTO button with FM radio selected scans for the next FM station
- Pressing the INFO button displays additional information including Radio Text, Signal Strength, Time & Date etc.
- Advanced functions including Manual Time Set can be accessed by pressing and holding the INFO button.  
(Use BAND+ & BAND– buttons to navigate and use ENTER button to select and confirm)

## **BLUETOOTH OPERATION (for applicable models)**

### **PAIRING**

- Press the POWER button at the master station to turn the radio ON (The time is displayed when radio is turned off)
- Repeatedly press the DAB+/FM button until Bluetooth is displayed
- Open Bluetooth settings on your mobile phone or other Bluetooth audio device.
- Press the AUTO button on the master station for 3 seconds.  
(PAIRING will flash on the on the master station's radio display)
- Follow the appropriate pairing procedure on your Bluetooth audio device

### **LISTENING TO AUDIO FROM A BLUETOOTH DEVICE**

- Ensure the radio is ON and set to BLUETOOTH mode as per first two steps above
- Ensure the green TUNER indicator is illuminated at the master station (Press AUX then 3 if the green TUNER indicator is not illuminated)
- Press the MUS button at individual intercom station(s) to enable Music mode at stations where music is required (The red light will be ON when Music mode is enabled)
- Select and play music from your Bluetooth audio device
- The volume setting on your Bluetooth audio device should be adjusted to give a comfortable music volume throughout the system.
- The music volume can then be adjusted individually at each station using the VOLUME buttons.
- To turn music off at individual stations, press the MUS button again at the applicable station to exit Music mode (The red light will be OFF when Music mode is disabled)

### **ADDITIONAL FEATURES (available with most Bluetooth devices)**

- Use the BAND+ and BAND- buttons to select previous or next track from intercom master
- Use the ENTER button to pause and resume play from intercom master
- Track Title, Artist and Album will scroll across intercom radio display while track is playing
- Progressive track time appears at bottom left of intercom radio display

### **CLEARING BLUETOOTH CONNECTIONS**

- If required, all Bluetooth connections can be cleared by pressing the AUTO button for 10 seconds.
- To reconnect any of the previously connected Bluetooth devices, the original connection must also be cleared from the Bluetooth device in Bluetooth settings.

### **FACTORY RESET**

- Press and hold the Power button for at least 5 seconds to reset the tuner to factory default settings.

# INTERCOM OPERATION

## DOOR/GATE STATION OPERATION

When the Doorbell button is pressed at the front door station, the electronic chime is heard at all stations.

On systems equipped with door camera and master, a video image of the visitor will appear at the master station for 20 seconds.

- To talk to the visitor at the front door station, press and hold the DOOR button at the master station or any room station. The green light will turn on indicating your microphone is active. Talk at a normal level then release the DOOR button to listen for a reply.
- To hold a conversation, press and hold the DOOR button to talk and release to listen.
- The video image of the visitor will remain visible at the master for the duration of communication to the door station and will reset 20 seconds after the DOOR button is released.
- Communication from the front door station will automatically cancel 20 seconds after the DOOR button is released. You can also manually cancel a call by pressing the CLEAR button.

** The visitor does not need to press any buttons to reply. All replies are 'hands free'.**

## LOCK OUTPUT

As an optional feature, electronic door locks can be released and Automatic gates can be opened and closed from the master or any room station while communicating with a door station.

### TO ACTIVATE THE LOCK OUTPUT:

Press and release the  button at the master or any room station while communicating with the door station.

- NOTE:**
- For the optional Lock feature to be available, additional wiring is required at time of installation.
  - Stations set to Monitor mode will not receive PAGING calls and will not hear the DOORBELL.
  - Stations with volume set to minimum will not receive PAGING or SELECT calls and will not hear the DOORBELL.
  - Stations set to PRIVACY mode cannot reply hands free.
  - Do not make a call if the red light is flashing as this indicates that someone is already using the system to communicate.
  - On systems using more than one door station the chime must first be activated before you can communicate with a door station. If required, communication can be initiated with a particular door station from the master by pressing DOOR followed by 1, 2 or 3 (corresponding to the particular door station). Once communication has been initiated, the conversation can be continued by pressing and releasing the door button as outlined above.

## PAGING CALLS

A Paging Call communicates to all other stations with the exception of door stations and is the best method of speaking to someone if you're not sure where they are in the house.

### To page all stations:

- Press and hold the HOUSE button at the master station or any room station. The green light will turn on indicating your microphone is active.
- Talk at a normal level then release the HOUSE button to listen for a reply. The green light will turn off at your station and will turn on at all other stations enabling these to reply.
- To hold a conversation, press and hold the HOUSE button to talk and release to listen.
- The system will automatically cancel a call if no buttons have been pressed for approximately 20 seconds. You can also manually cancel a call by pressing the CLEAR button.

** When replying to a call there is no need to press any buttons. All replies are 'hands free'.**

## SELECT CALLS

A Select Call allows you to make an intercom call to a particular station or group of stations.

Your installer will preset each of your room stations with a number and a numbering format (Single or Double Digit).

- To talk to another station, simply press and hold the *number* button for that station, talk, then release to listen.

If your system has more than seven stations, see the section “Making a Select Call – Double Digit Format”.

### Making a Select Call – Single Digit format

- Press and hold a CALL button (1–7) at the master station or any room station. The green light will turn on indicating your microphone is active.
- Talk at a normal level then release the CALL button to listen for a reply. The green light will turn off at your station and will turn on at the called station enabling the other station to reply.
- Continue the conversation by pressing the selected number to talk and releasing the selected number to listen.
- The system will automatically cancel a call if no buttons have been pressed for approximately 20 seconds. You can also manually cancel a call by pressing the CLEAR button.

 Those replying to a call need not press any buttons. All replies are ‘hands free’.

### Making a Select Call – Double Digit format

- To call a station using a two digit station number, press the first digit of the station number at the master station or any room station. The red light will begin flashing.
- Press and hold the second digit of the station number. The green light will turn on indicating your microphone is active.
- Talk at a normal level then release the second digit button to listen for a reply. The green light will turn off at your station and will turn on at the called station enabling the other station to reply.
- Continue the conversation by pressing the second digit button to talk and releasing it to listen.
- The system will automatically cancel a call if no buttons have been pressed for approximately 20 seconds. You can also manually cancel a call by pressing the CLEAR button.

 Those replying to a call need not press any buttons. All replies are ‘hands free’.

## MUSIC MODE

Any station set to *Music* mode can listen to any other station being monitored, and can listen to music piped from the master station or input jack.

- Press the MUS button at any station to enable *Music* mode for that station. The red light will turn on indicating that *Music* mode is enabled.
- Adjust the volume control to the desired level.
- Press the MUS button again to disable *Music* mode. (The red light will turn off)

## MONITOR MODE

Any station set to *Monitor* mode can be listened to by other stations. For example, to ensure that a baby is sleeping soundly or that a sick child or an elderly parent is comfortable at night.

### To Select Monitor Mode:

- Press the MON button at the station to be monitored. (The green light will turn on indicating the microphone is active)
- Select *Music* mode at any other station to listen to the monitored station

Listening to monitored station(s) is more effective if the radio at the master station (or aux audio) is turned off.

Stations set to *monitor* mode will not respond to paging calls, door calls and door chimes but will respond to Select Calls which allows for communication to the station being monitored

### To de-select Monitor Mode:

- Press the MON button. (The green light will turn off).

## PRIVACY MODE

*Privacy* mode caters for situations where you want to prevent other stations from listening in to a particular room by disabling the station’s ability to reply to incoming calls.

### To select Privacy Mode:

- Press the PRIV button at the station where privacy is required. (The green light will flash indicating the station is in *Privacy* mode).

### To de-select Privacy Mode:

- Press the PRIV button. (The green light will turn off).

Note: Music, Monitor and Privacy modes will reset in the event of a power disruption.

Outgoing calls can still be made while in *Privacy* mode.

## AUDIO OFF MODE

The VOLUME buttons at each station control the audio volume for that station however some audio will still be heard even with the volume adjusted to minimum.

- To completely turn off all audio at any station, press and hold the MUS button until the red light begins to flash slowly.
- To turn the audio back on, press the MUS button. (The red light will turn off)

## VOLUME ADJUSTMENT

Adjustment of the VOLUME buttons at the room stations will affect the volume for all audio functions including music, communication and chime at that station.

Adjustment of the volume buttons at the master will affect music and communication separately depending on the mode that the master is in at the time the adjustment is made.

If adjusting the volume while listening to music, the volume level for music will change at the master but the adjustment will have no affect on the volume level for communication (and door chime).

If adjusting the volume while receiving communication, the volume level for communication (and door chime) will change but the adjustment will have no affect on the volume level for music.

 
## DESKTOP STATION – AUDIO INPUT

The Desktop Station can be used as a computer speaker or to listen to music from an MP3 player.

You will need an appropriate lead with a plug at one end to suit your audio device and a 3.5mm stereo plug at the other end to plug into your desktop station.


### To listen to your auxiliary audio device:

- Plug the appropriate audio lead into the Audio Input Socket at the bottom of the desktop station using the Right Angle Adaptor if required.
- Plug the other end of the audio lead into your computer or MP3 player.
- Ensure the Audio Source Selector switch, at the bottom of the desktop station, is switched in the direction of the arrow in Diagram A.
- Select Music mode on the desktop station by pressing the MUS button.
- Ensure that your Computer or MP3 player is turned on and playing.
- With the volume of the desktop station set to the normal level for communication, adjust the output volume on your computer or MP3 player so the volume from the desktop station is at the desired level.

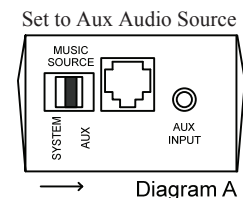

### To listen to radio or auxiliary music from the master:

 - Switch the Audio Source Selector switch, at the bottom of the desktop station, in the direction of the arrow in Diagram B.
- Ensure the radio is turned on at the master and *Music* mode is selected at the desktop station.

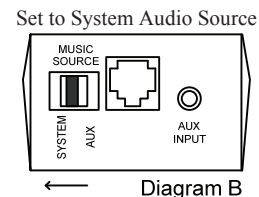

## AUXILIARY OUTPUTS

This is a feature that can be used to control optional auxiliary devices.

- Press the AUX button followed by 1 at any station to activate or toggle (depending on setup) auxiliary output 1. Auxiliary Output 1 LED will illuminate at master indicating when output is active.
- Press the AUX button followed by 2 at any station to activate or toggle (depending on setup) auxiliary output 2. Auxiliary Output 2 LED will illuminate at master indicating when output is active.

For systems not using a master, an optional Auxiliary Output board and additional wiring will be required. For systems with a master where this feature is to operate from room stations as well as from the master, one of the two following conditions will be required:

1. Additional wiring will be required between each room station and the master for systems configured to single digit keypad operation.
2. Systems configured to double digit operation will not require additional wiring however the 7 button must be used instead of the AUX button.

## AUDIO INPUT SELECTOR

- Press AUX button followed by 3 button at master to change the audio input source (Radio or Auxiliary Music)
- The TUNER LED or AUX MUSIC LED will illuminate indicating the active input

NOTE: On systems configured for double digit operation, the 7 button may be used instead of the AUX button to conform with cases where the 7 button is used to activate the auxiliary outputs.

This feature is only available on systems using a master station

## VIDEO MONITORING AT MASTER

- Press AUX button followed by 5 button at master to monitor Video 1
- Press AUX button followed by 6 button at master to monitor Video 2 (if applicable)
- Press AUX button followed by 7 button at master to monitor Video 3 (if applicable)  
To manually cancel the displayed image, press AUX followed by 5, 6 or 7 (corresponding to the active video input) at master. Alternatively, pressing the AUX button followed by the HOUSE button at master will cancel the video image irrespective of the active video input.

NOTE: The displayed video image will auto cancel after 90 min to prevent the display accidentally being left permanently on.

On systems configured for double digit operation, the 7 button may be used instead of the AUX button to conform with cases where the 7 button is used to activate the auxiliary outputs.

## VIDEO MONITORING AT ADDITIONAL VIDEO DISPLAYS

This refers to optional additional video displays that may be fitted beside room stations.

- Press AUX button followed by 5 button at a room station to monitor Video 1
- Press AUX button followed by 6 button at a room station to monitor Video 2 (if applicable)
- Press AUX button followed by 7 button at a room station to monitor Video 3 (if applicable)
- To manually cancel the displayed image, press AUX followed by 5, 6 or 7 (corresponding to the active video input) at any room station. Alternatively, pressing the AUX button followed by the HOUSE button at any room station will cancel the video image irrespective of the active video input.

NOTE: The displayed video image will auto cancel after 90 min to prevent the display accidentally being left permanently on.

On systems configured for double digit operation, the 7 button may be used instead of the AUX button to conform with cases where the 7 button is used to activate the auxiliary outputs.

## RADIO FILTER

When listening to the radio (particularly on the AM band), there can sometimes be a degree of background noise depending on signal strength and nearby sources of electrical interference.

The master equipped with a high frequency filter that can be used to reduce this noise or just reduce treble if desired.

- Press the AUX button followed by the 4 button at the master to activate the filter. The Radio Filter Led will illuminate when the filter is turned on. Please note that the filter only affects audio from the AM/FM radio.

NOTE: On systems configured for double digit operation, the 7 button may be used instead of the AUX button to conform with cases where the 7 button is used to activate the auxiliary outputs.

## AUDIO INPUT JACK

If an optional Audio Input Jack has been fitted to your system, any audio source (iPod, MP, CD, Tape, Computer Audio) can be plugged into the jack allowing music from this source to be piped to all intercom stations.

### To set up and operate for systems using the M200 or M250 master:

- Ensure the audio source is connected to the Input Jack using the appropriate lead
- Press the AUX button followed by the 3 button to select the AUX MUSIC input
- Turn on the audio source, (iPod, MP3, CD, DVD, Tape, Computer)
- Press the MUSIC button (red MUSIC LED illuminates) at stations where music is to be heard
- Adjust the volume of the audio source (if volume control available) to an appropriate level
- Adjust volume at individual room stations as required

NOTE: If your audio source does not have a means of controlling its output volume, the System Auxiliary Volume can be adjusted using the Audio Options menu in Program mode.

Ideally, this volume level would be adjusted so that the volume from the speaker is roughly the same as when using the radio.



**To set up and operate for systems not using a master:**

- Ensure the audio source is connected to the Input Jack using the appropriate lead
- Ensure the radio is turned off using the Power button
- Turn on the audio source, (iPod, MP3, CD, DVD, Tape, Computer)
- Press the MUSIC button (red MUSIC LED illuminates) at stations where music is to be heard
- Adjust the volume of the audio source (if volume control available) to an appropriate level in conjunction with the volume and tone controls on the Input Jack
- Adjust volume at individual room stations as required

**WIRELESS AUDIO INPUT**

The WIRELESS AUDIO TRANSMITTER is an alternative to the hardwired Input Jack above and is an optional accessory which, in conjunction the FM radio on the master station, allows any audio source, (CD, DVD, Tape, Computer audio), to be piped to all intercom stations.

**To set up:**

- Ensure the WIRELESS AUDIO TRANSMITTER is powered and connected to the audio source
- Turn on the audio source, (CD, DVD, Tape, Computer)
- Turn on the radio at the master station
- Tune the FM radio to the frequency of the WIRELESS AUDIO TRANSMITTER
- Sound from the audio source will be heard on that FM frequency

The FM frequency can be stored as a radio preset which effectively becomes the Auxiliary Input selection key

**GATE STATUS INDICATOR**

This is an optional feature that allows you to determine from your master if your automatic gate is open or closed. The indicator can alternatively be used to indicate the status of any device fitted with an appropriate status switch.

Note: For this option to operate, additional wiring and an appropriate status switch is required.

**HELP MENU**

The HELP MENU summarizes the 2<sup>nd</sup> function of certain keypad buttons in conjunction with the AUX button.

- Press and hold the **i** button to bring up the help menu
- Press the VOLUME + and – buttons to navigate between pages.
- Press CLEAR to exit the menu

Page 2 of this menu shows the 2<sup>nd</sup> function of certain keypad buttons in conjunction with the '7' button (Applicable to Double Digit format Only)



